

Qty.

1/1

1/1

1

Item

1/1A

2/2A

3


Description


47.75"h Vertical Extrusion


47.75"h Vertical Extrusion

Order #XXXXX - MOD-1538 Assembly

Steps:

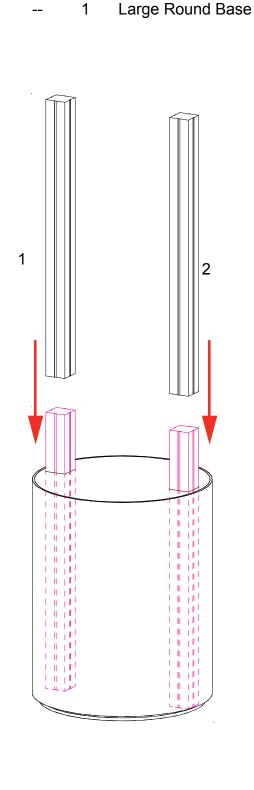

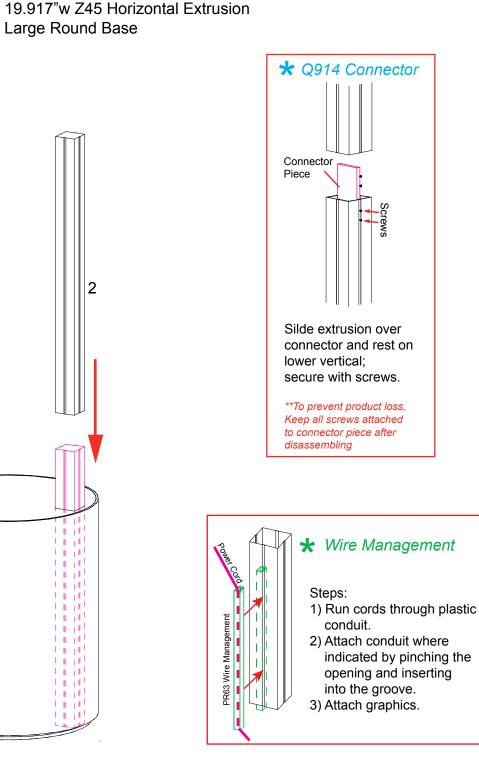

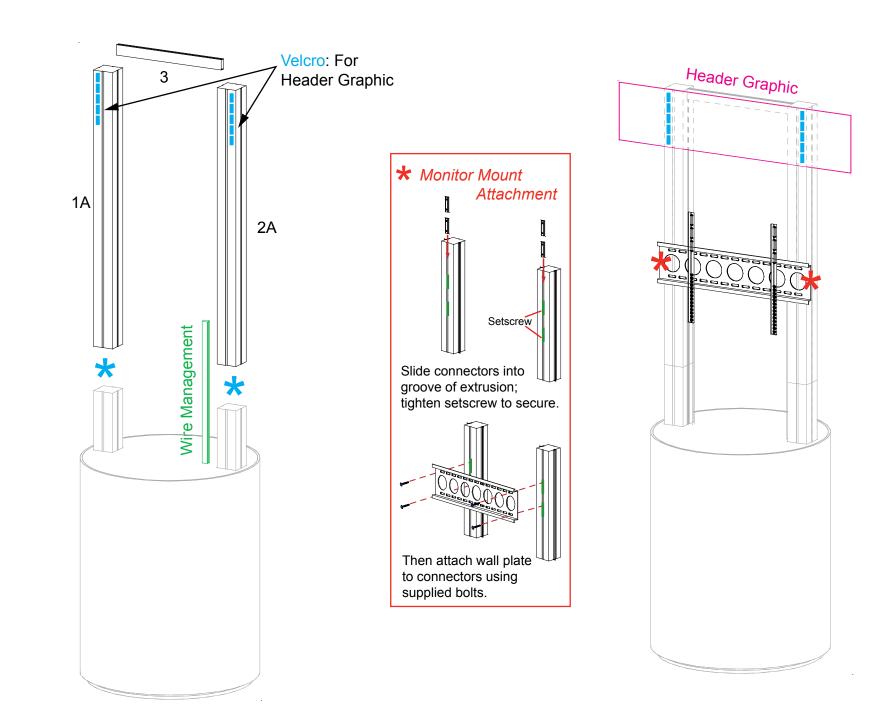

www.classicexhibits.com

1) Slide verticals [1] & [2] into the square holes in top of base. 2) Connect verticals [1A] & [2A] to installed verticals [1] & [2]. See Q914 Connection detail.

3) Attach horizontal [3] between verticals [1A] & [2A].

4) Install Monitor Mount to verticals.

See Monitor Mount Attachment detail.


5) Attach Header Graphic to Velcro installed on verticals.






General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

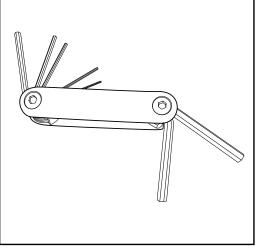

Hex Tool - Essential for Assembly

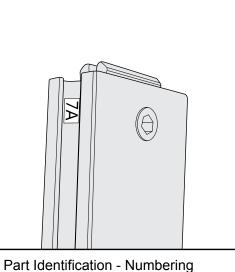







- Cleaning & Packing
 - For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
 - Keep exhibit components away from heat and prolonged sun exposure.
 Heat and UV exposure will warp and fade components.
 - Retain all provided Packing Materials.
 All provided packing materials are for ease of repacking & component protection.

Disassembly


- For loss prevention, tighten all setscrews and locks during disassembly

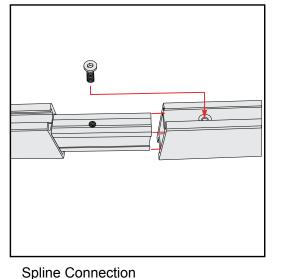

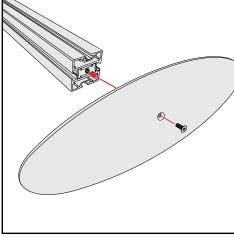


Base Plate & Extrusion Connection



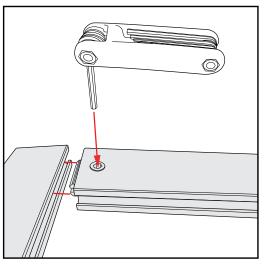

Extrusion & Lock Connection

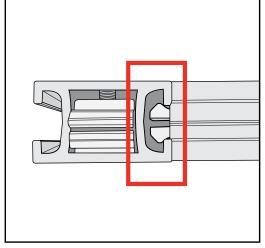

www.classicexhibits.com

Engaged Lock

ALL CONNECTIONS MUST BE TIGHTLY SECURED

LADDERS OR LIFTS MAY BE REQUIRED

DO NOT USE POWER TOOLS

