





© 2023

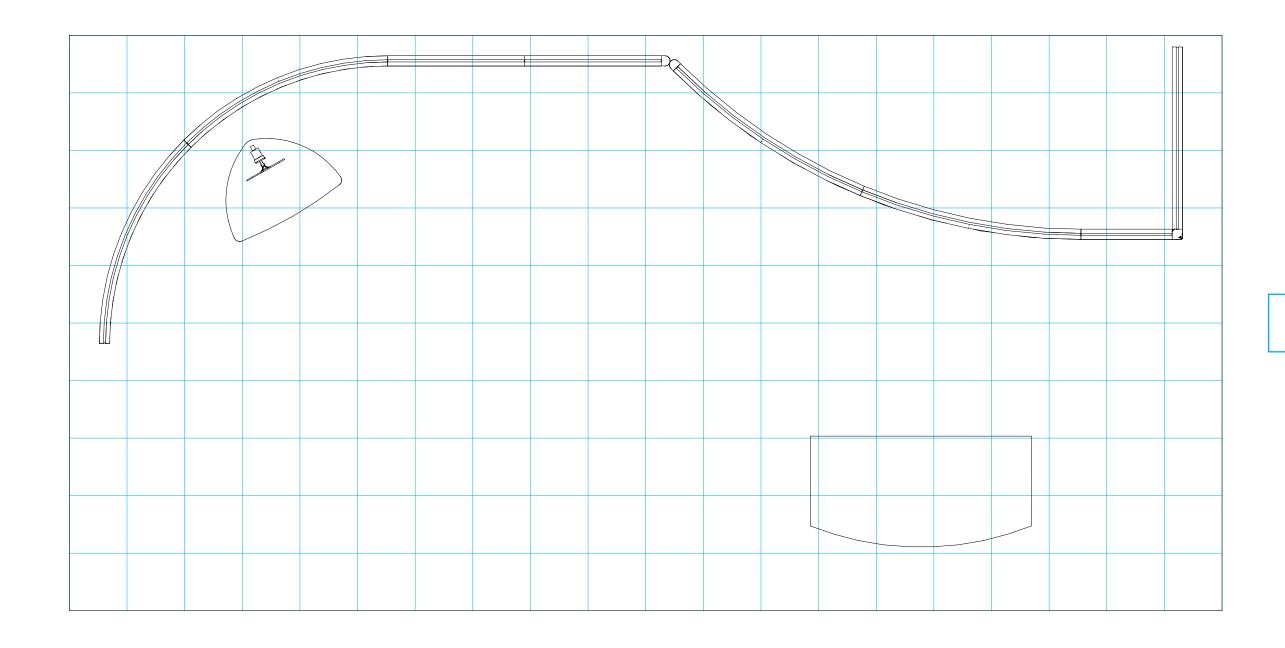

www.classicexhibits.com



Order #XXXXX General Information

General Setup Instructions

© 2023


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.


Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.


Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

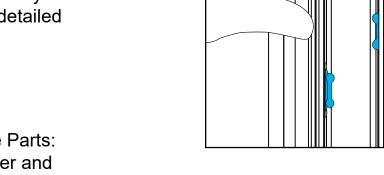

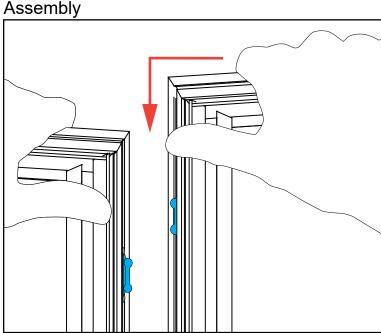

Assembly Cont'd

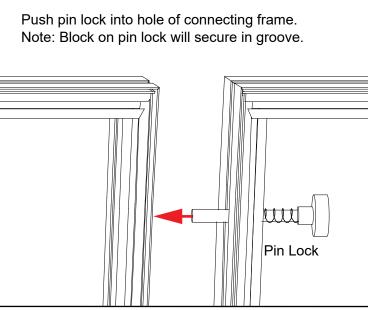


Side-by-Side Assembly


1) Frames: Place frames side-by-side with one higher than the other, then slide panel down to lock panels securely together.

2) Corner Connectors: Repeat Step 1 for installing corner connectors to frames.

SEG Graphic Installation

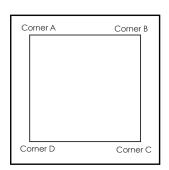

It is important to first insert graphic into each alternate corner, then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly

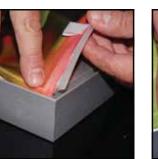

Step 1 Insert corner A Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner



Step 2 Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D. to complete the installation of the corners



Step 3 Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.


www.classicexhibits.com

Side-by-Side Disassembly

1) Pull pin lock outwards to disengage.

2) Pull frames upward and apart at the same time to detatch.

Graphic Removal

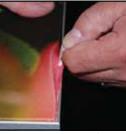

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.



© 2023

Order #XXXXX Crate Packing

CRATE PACKING

www.classicexhibits.com

Crate 1 of 1



Order #XXXXX Backwall Assembly

- Item Qty. Description
- 1 1 38"w x 95"h Gravitee Panel
 2 1 94.5"h Gravitee corner post w/ caps


© 2023

- 3 1 19"w x 95"h Gravitee Panel
- 4 1 46"w x 95"h curved Gravitee Panel
- 5 1 46"w x 95"h curved Gravitee Panel
- 6 1 95"h Gravitee hinged connector
- 7 1 28.5"w x 95"h Gravitee Panel
- 8 1 28.5"w x 95"h Gravitee Panel
- 9 1 46"w x 95"h curved Gravitee Panel
- 10 1 46"w x 95"h curved Gravitee Panel


Steps:

Refer to the Gravitee Assembly general information page.

1) Assemble Gravitee panels & posts [1] through [10] in numerical order as shown.

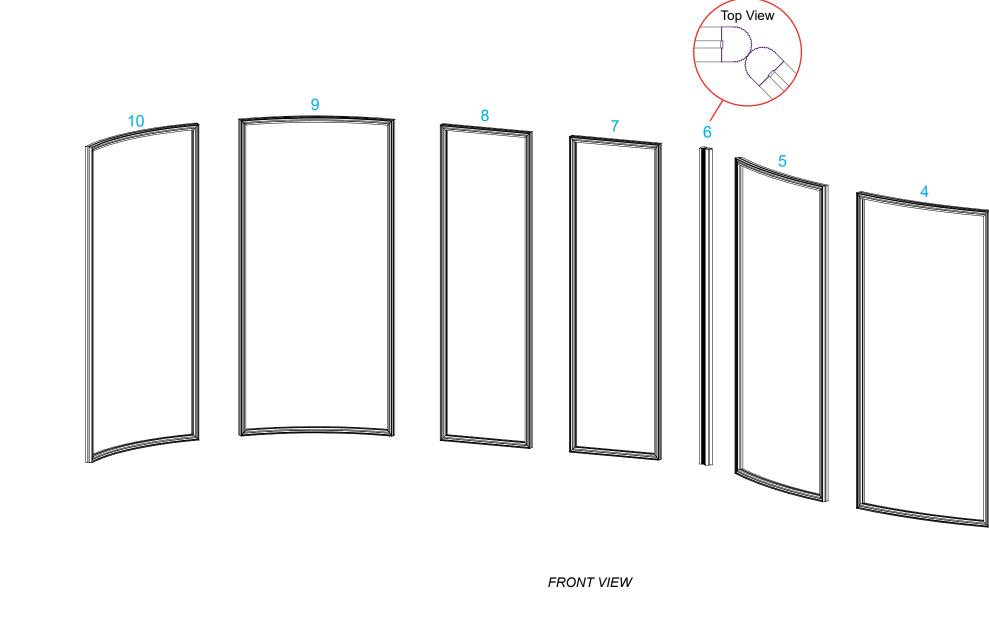


www.classicexhibits.com

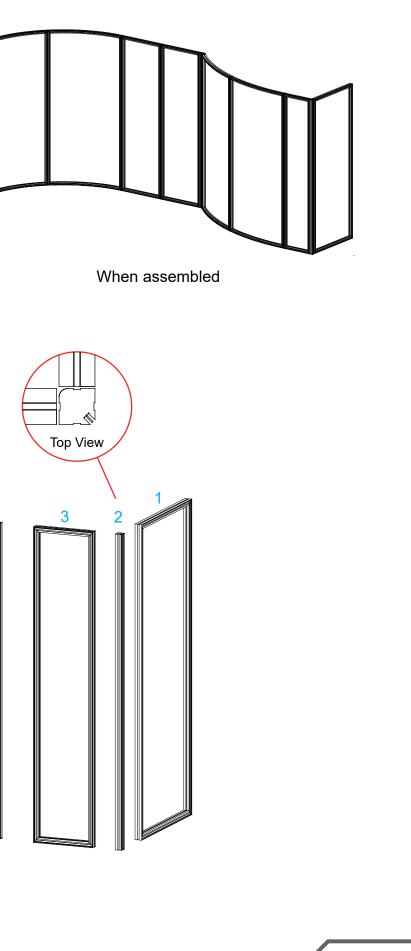



Order #XXXXX Backwall Attachments

SEG Graphic Installation

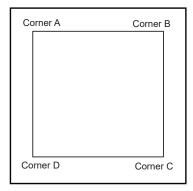

It is important to first insert graphic into each alternate corner, then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.



© 2023

Step 1 Insert corner A. Turn edge of graphic so silicon welt is perpendicular to face of graphic. Insert narrow side of welt with fabric to outside into the channel. Repeat for other side of this corner.



Step 2 Repeat Step 1 for opposite corner C, then insert corner B, followed by corner D, to complete the installation of the corners.



Ano


Step 3 Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.

Graphic Removal

To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.


Steps:

- 1) Apply SEG graphics to backwall panels as shown.
- 2) Connect lights to top of panels where indicated. See Light Attachment detail.

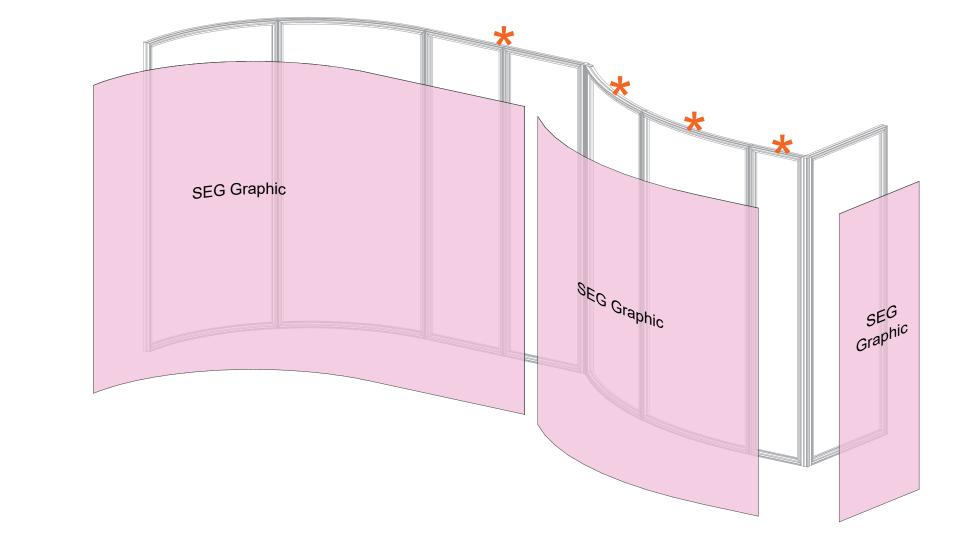


FRONT VIEW

www.classicexhibits.com

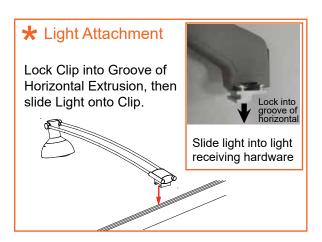



Order #XXXXX MOD-1561 Monitor Stand Assembly

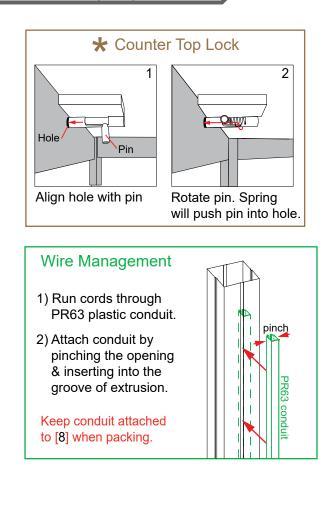



© 2023


ltem	Qty.	Description
1	1	38" GS210 Vertical Extrusion
2	1	38" S30 Vertical Extrusion
3	1	38" S30 Vertical Extrusion
4	2	18.8496" Z45 Curved Extrusion
5	1	21.7196" Z45 Curved Extrusion
6	2	18.8496" Z45 Curved Extrusion
7	1	21.7196" Z45 Curved Extrusion
8	1	36" S44 Vertical Extrusion


Steps:

- 1) Attach horizontals [4,4,5] between verticals [1,2,3]
- 2) Slide floor between verticals [1,2,3] to rest on [4] and [5].
- 3) Insert pins into [1,2,3] where shown.
- 4) Slide shelf between [1,2,3] to rest on pins.
- 5) Slide infill between [2] and [3].
- 6) Attach horizontals [6,6,7] between [1,2,3] to secure infill.
- 7) Lock counter top to [6]. See Counter Top Lock detail.
- 8) Attach vertical [8] to counter top, using bolt.
- 9) Attach monitor mount to [8]. See Monitor Mount detail.
- 10) Attach monitor to mount, then route monitor cord through conduit. See Wire Management detail.

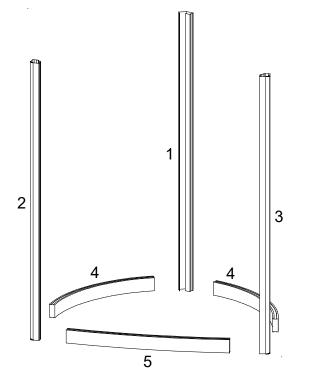


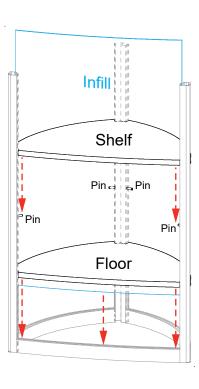

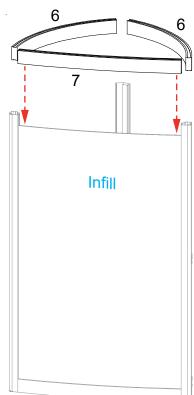


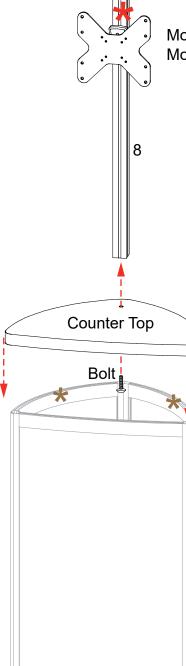

Monitor Mount

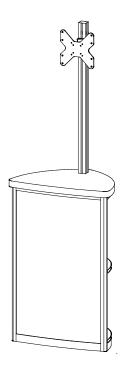

Completed Assembly

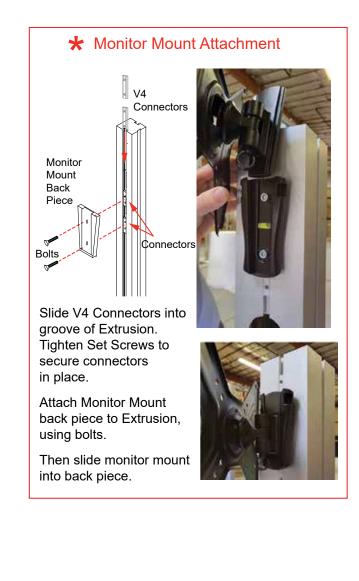



Order #XXXXX GOD-1560 Counter Assembly

- Item Qty. Description
- 11 1 37.5"h Gravitee Corner Post w/ caps & door hinge


© 2023


- 12 1 11.5"w x 38"h Gravitee Panel
- 13 1 37.5"h Gravitee Hinged Connector
- 14 1 18.327"w x 38"h curved Gravitee Panel
- 15 1 18.327"w x 38"h curved Gravitee Panel
- 16137.5"h Gravitee Hinged Connector
- 17 1 11.5"w x 38"h Gravitee Panel
- 18 1 37.5"h Gravitee Corner Post w/ caps w/ caps & door hinge
- 9 1 37.094"w Z45 Horizontal Extrusion
- 10 1 37.094"w Z45 Horizontal Extrusion
- 11 1 34.417"h Z45 Horizontal Extrusion w/ Door Stops


Steps:

Refer to the Gravitee Assembly general information page.

- 1) Assemble Gravitee panels & posts [11] through [18], in numerical order as shown.
- 2) Attach horizontal extrusions [9,10] between posts [11,18].
- 3) Connect vertical [11] between horizontals [9,10].
- 4) Install Doors to [11] & [18]. See Door Attachment detail.

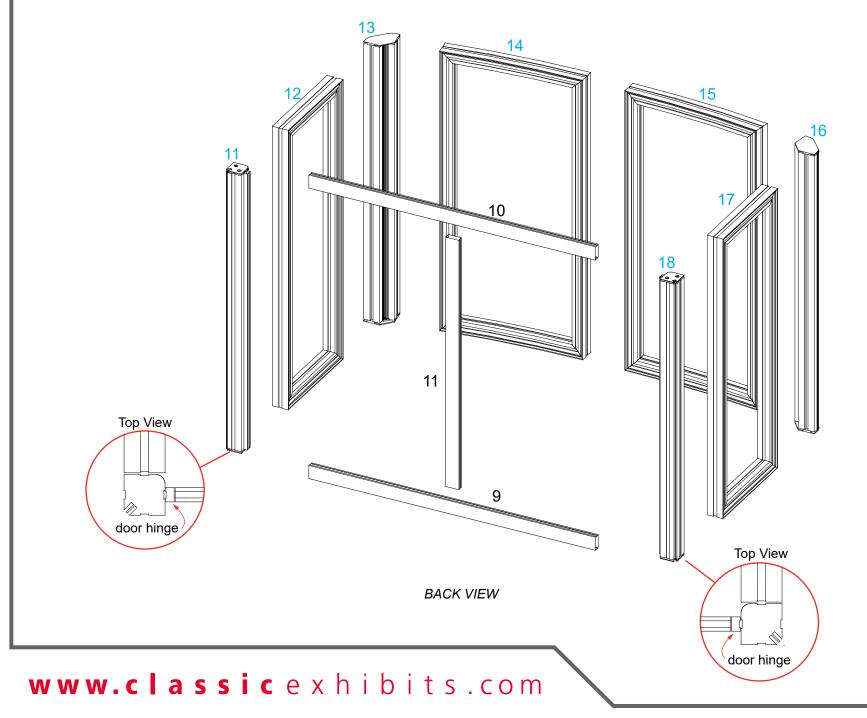

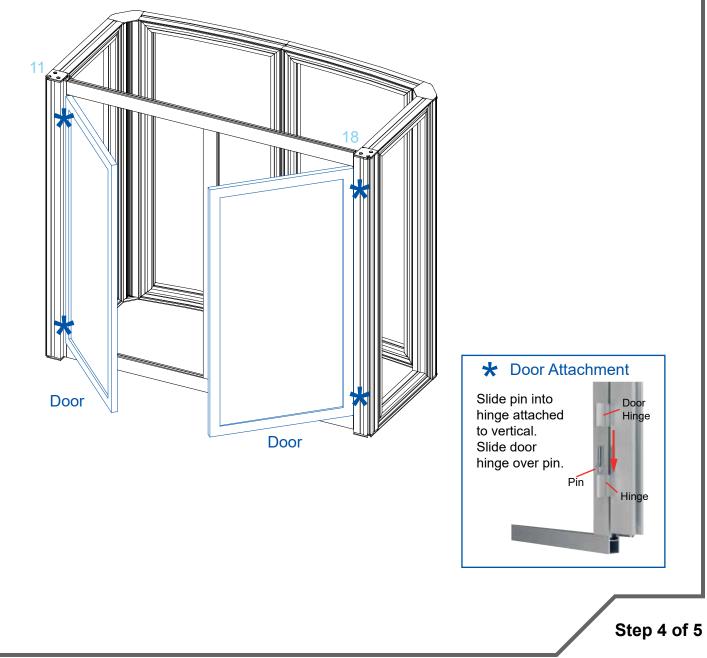


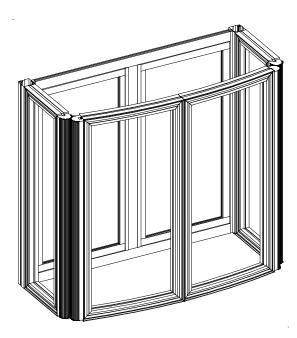

When assembled




Order #XXXXX GOD-1560 Counter Assembly (cont'd)

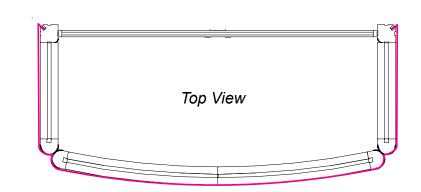


© 2023

Steps:

- 1) Wrap SEG Graphic around front & sides of Counter, as shown.
- 2) Attach Shelf Supports using Velcro; place Internal Shelf.
- 3) Place Counter Top on top of assembly & secure in place.

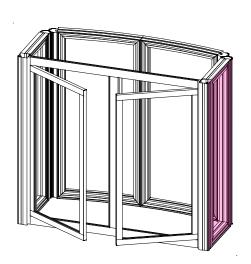


Back View

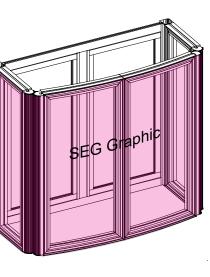

Front View

SEG Graphic Installation

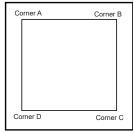

It is important to first insert graphic into each alternate corner then to the sides of the frame. If this is not done, graphic will not fit into the frame correctly.




Step 1Step 2Insert corner A. Turn edge of
graphic so silicon welt is
perpendicular to face of
graphic. Insert narrow side
of welt with fabric to outside
into the channel. Repeat for
other side of this corner.Step 2
Repeat Step 1 for opposite
corner C, then insert corner
B, followed by corner D, to
complete the installation of
the corners.



Step 3 Once all corners are inserted, press one silicon edge into channel from corners and work toward the center. Make sure welt is fully inserted into channel. Continue until all sides are done. Smooth out edges of graphic.




To remove the graphic from the frame, locate the fabric pull tab. Gently pull up on the tab to remove the fabric.

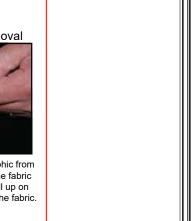


Counter Top Shelf Shelf Supports attach with Velcro

www.classicexhibits.com

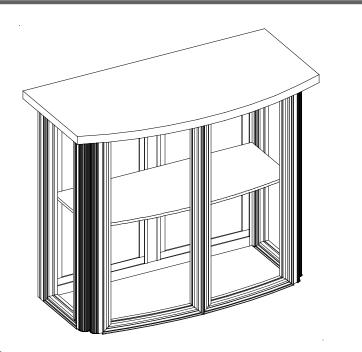

When assembled

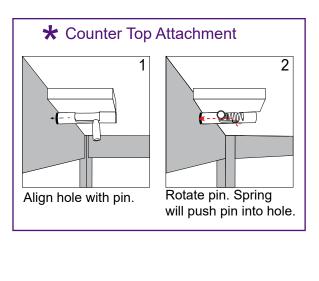

Step 5 of 5

Shelf Supports attach with Velcro