
Order #XXXXX - 10x20 - General Layout

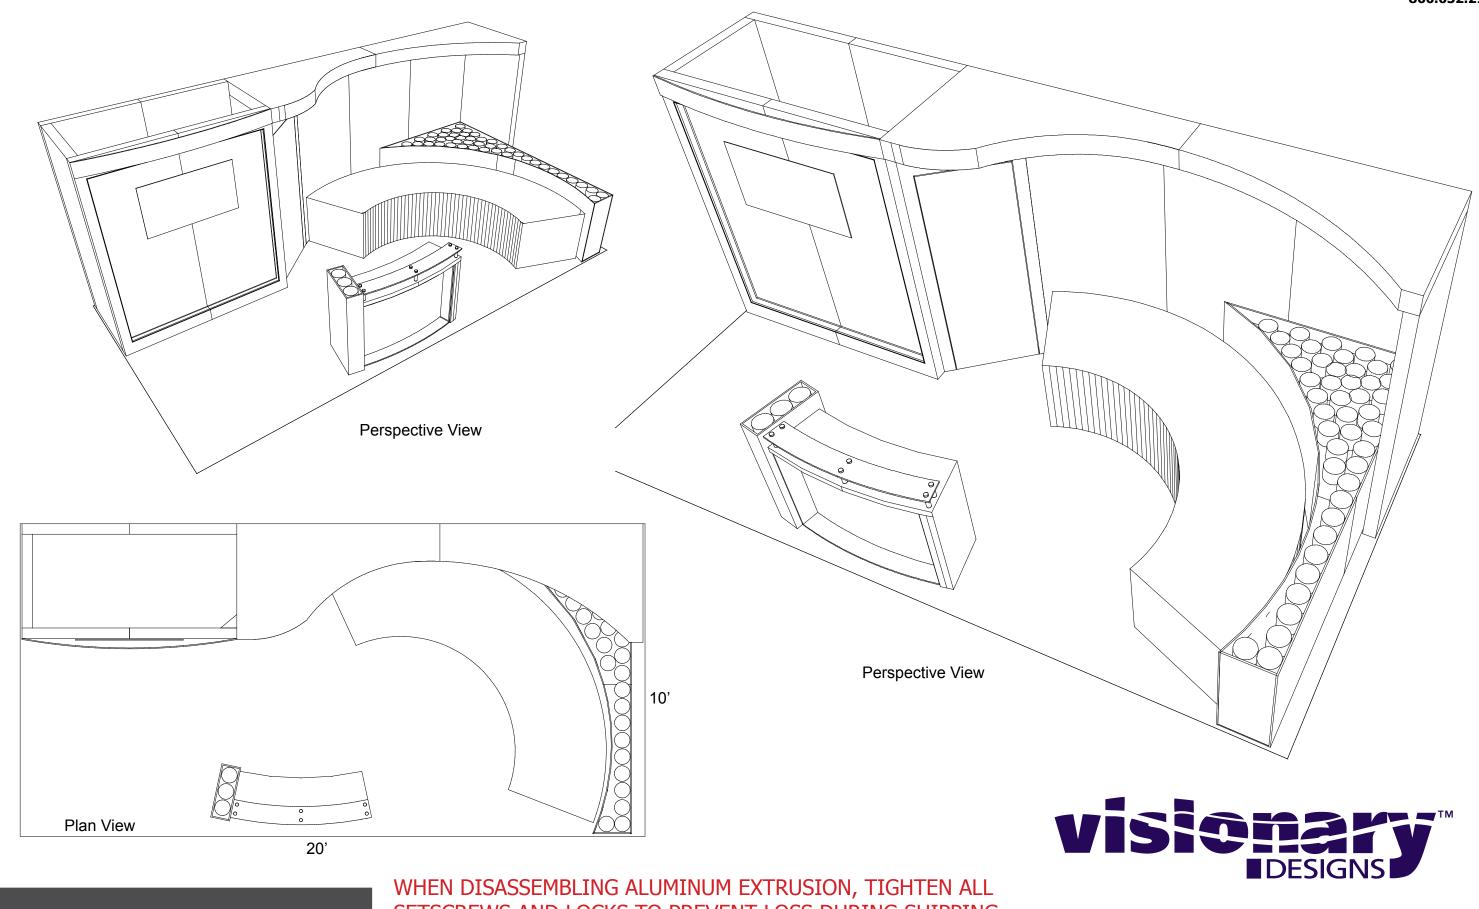


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

General Setup Instructions

- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

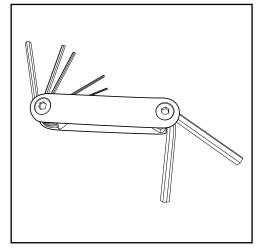

Hex Tool - Essential for Assembly







Base Plate & Extrusion Connection









Cleaning & Packing

- For Cleaning Metal, Plex, & Laminate Parts: Use a **MILD NON-ABRASIVE** cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure.
 Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials.
 All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all setscrews and locks during disassembly

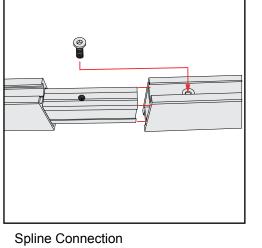

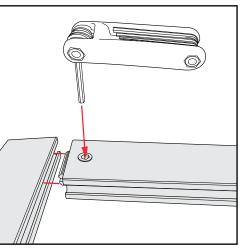

Extrusion & Lock Connection

Engaged Lock

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

866.652.2100

WARNING


DO NOT USE POWER TOOLS

LADDERS OR LIFTS MAY BE REQUIRED

ALL CONNECTIONS MUST BE TIGHTLY SECURED


SEG Graphic Installation

- 1) Locate channels along the edges of extrusions
- 2) Insert graphic corners first into channels then center point of graphic into channels. Allows for proportional fit around the perimeter of the extrusion.
- 3) Working from center to corner, slide silicon edge on graphic into channel.
- 4) After all edges of graphic have been inserted into channels, step back and assess graphic fit, make adjustments where needed.

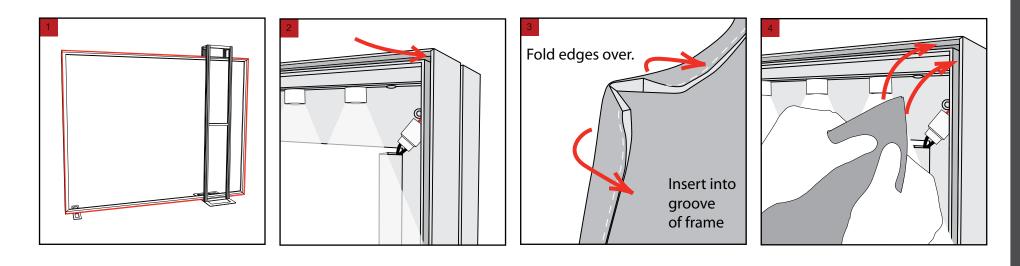

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

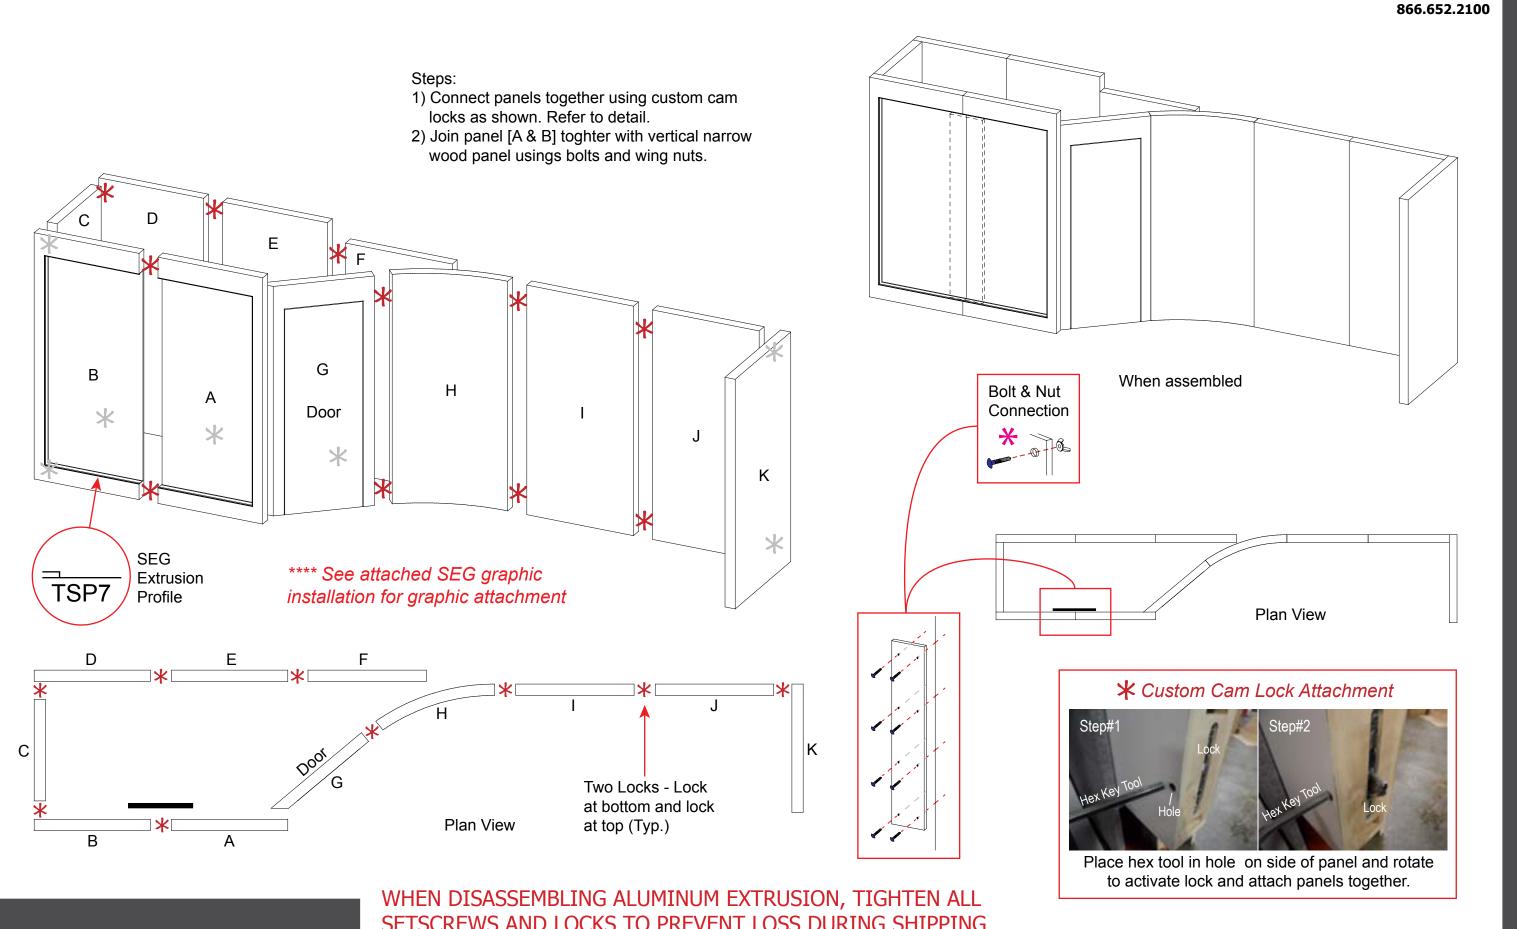



SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com

© 2015

Page 1 of 4

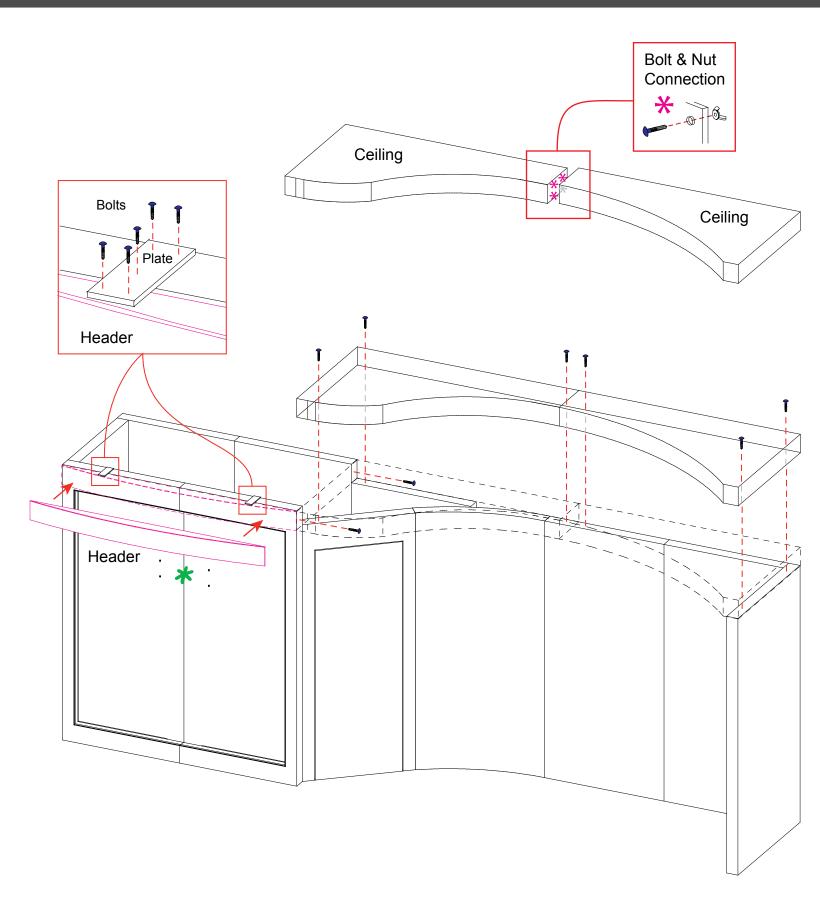


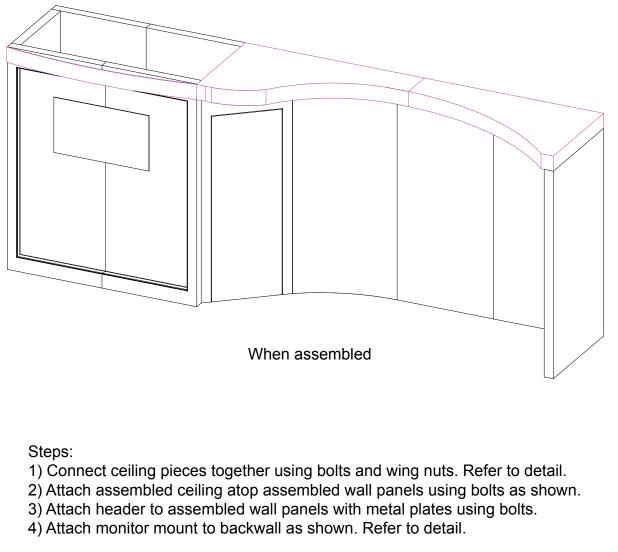

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com


866.652.2100

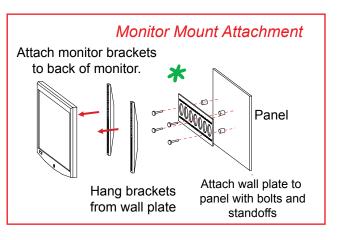

© 2015

Page 2 of 4



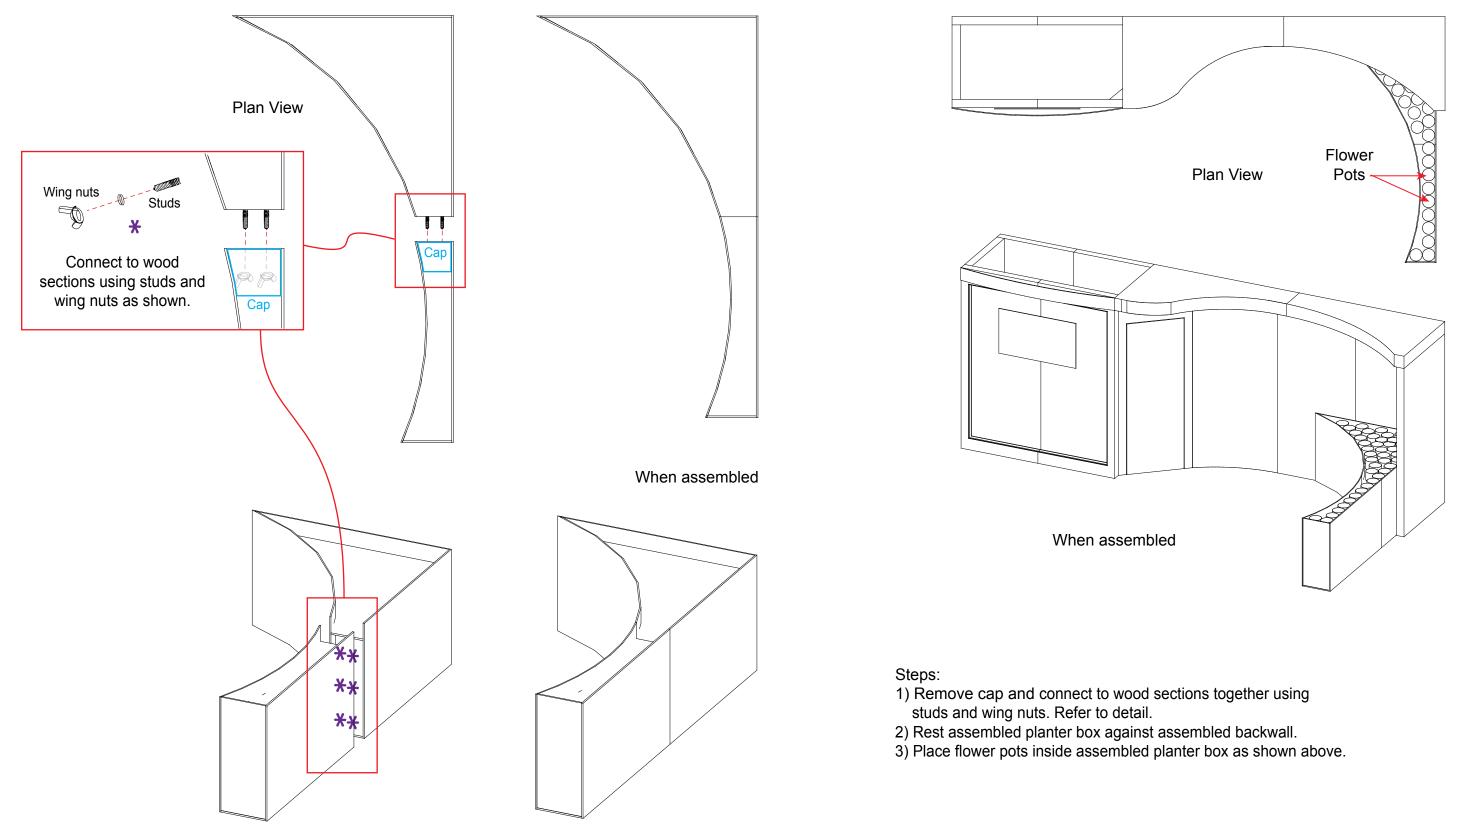


WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexhibits.com


Step 3


866.652.2100

© 2015

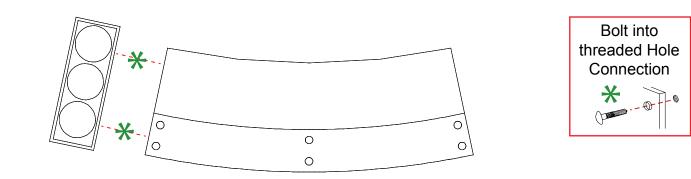



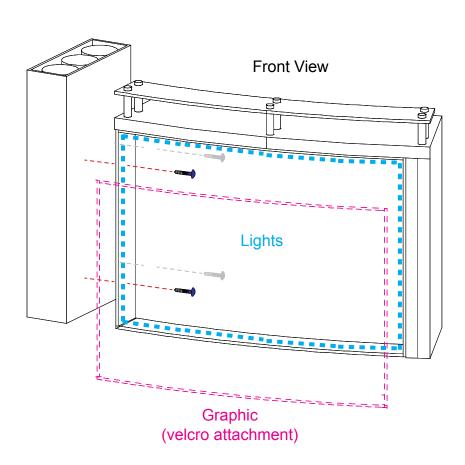

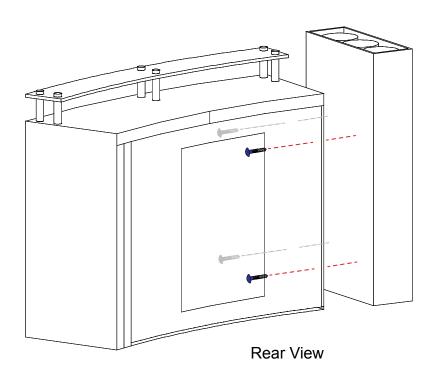




Steps: 1) Connect using bol 2) Place flov 3) Velcro at

WHEN DISASSEMBLING ALUMINUM EXTRUSION, TIGHTEN ALL SETSCREWS AND LOCKS TO PREVENT LOSS DURING SHIPPING

www.classicexh_ibits.com

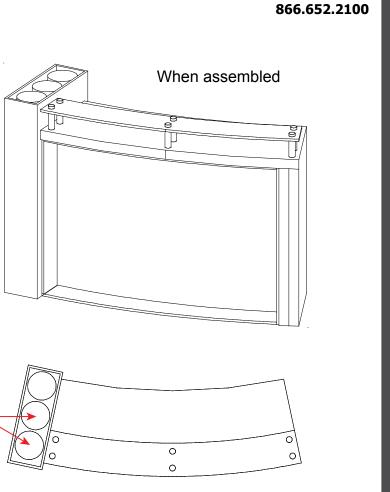

Plan View

1) Connect two piece reception counter together

- using bolts. Refer to detail.
- 2) Place flower pots atop assembled reception counter.3) Velcro attach graphic to front of reception counter.

© 2015